

Aurora user manual
Aurora Gebrauchsanweisung
Manuel d'utilisation Aurora
Aurora - Manuale utenti
Manual de usuario Aurora






READ ALL INSTRUCTIONS BEFORE USE & SAVE THEM FOR FUTURE REFERENCE

1. Parts Guide

Before use ensure the filter is fitted in the inner water tank.

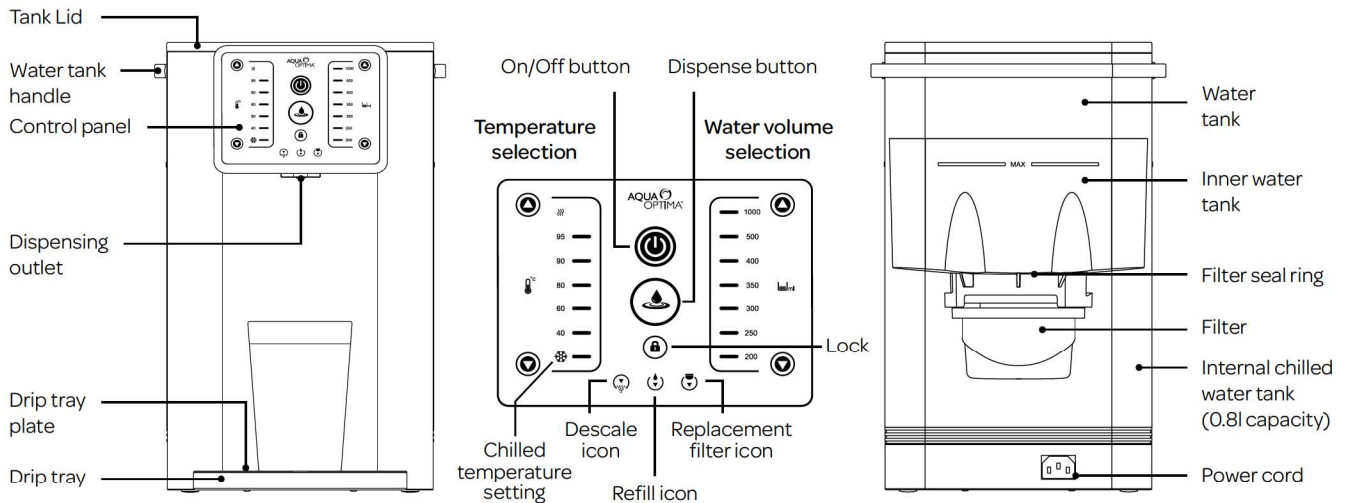

Before first use, clean the appliance, following the points in the installation set up and cleaning section.

IMPORTANT SAFEGUARDS

Necessary precautions must be taken when using electrical appliances, and these include the following:-

1. Keep the appliance cord out of reach of children.
2. This appliance can be used by children aged 8 and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with this appliance. Cleaning and user maintenance shall not be carried out by children without supervision.
3. Install the appliance according to the installation instructions in this user manual.
4. Use on a flat heat resistance surface.
5. Use in a well ventilated area. This appliance emits hot steam.
6. Ensure the voltage on the appliance rating plate corresponds to that of the mains electricity.
7. Never place the appliance on or close to sources of heat or very damp places.
8. Ensure that the power cord does not come into contact with hot surfaces.
9. NEVER PLACE THE APPLIANCE BODY, PLUG OR POWER CORD IN WATER OR OTHER LIQUIDS; ALWAYS WIPE CLEAN WITH A DAMP CLOTH.
10. Always ensure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
11. Do not obstruct the ventilation on the sides of the appliance.
12. This product is intended to filter tap water only. Do not put water of unknown quality or that has been microbiologically impaired into the product. Use only cold or room temperature water. Do not use for the preparation of baby food.
13. Consume filtered water within three days.
14. To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
15. Never use the appliance if the power cord or plug are damaged or if the appliance itself is faulty.
16. Any changes to this product that have not been expressly authorized by the manufacturer may lead to the user's guarantee being rendered null and void.
17. Packaging must never be left within the reach of children since it is potentially dangerous.
18. This appliance is designed for filtering, chilling and heating water. Please do not use the appliance to chill other liquids as this will damage the appliance and void the guarantee.

19. Do not store or use this appliance outdoors.
20. If the appliance is used incorrectly, please remove the plug from the socket and contact Aqua Optima customer services.
21. The appliance is designed for use with Aqua Optima Evolve+ filters, the performance is not guaranteed if any other filters are used.
22. Do not leave the appliance unattended during operation.
23. Do not clean with solvents or harsh chemicals.
24. Do not move the appliance when in use.
25. Do not operate appliance with a damaged cord, plug or after the appliance has malfunctioned or been damaged in any manner. If the cord is damaged it must be changed by a qualified person to avoid a hazard.
26. Do not fill the appliance with water over 30°C.
27. Do not remove filter while the appliance is running.
28. Do not use appliance without the filter correctly placed or if the filter is damaged or broken.
29. At first use or after the appliance has been completely drained of water in all tanks, ensure the instructions for first use are followed.
30. The appliance should not be placed in a cabinet when in use.
31. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Replacement Evolve+ filters are available from all Aqua Optima stockists.

The heating element surface is subject to residual heat after use.

Appliance outlet and other items may be hot after a cycle.

Failure to follow these instructions could cause scalding or damage to the product.

2. Control Panel



On/Off Button: Press for 1 second to activate or deactivate the appliance. Blue light shows when power is on.



Lock: Press and hold for 3 seconds to lock or unlock appliance, white light shows when unlocked, red light shows when locked. Auto lock after 60 seconds of no button pressing (child lock).



Dispense Button: Press to start/stop dispensing, light will fade in & out whilst dispensing, red (Hot) or blue (Chilled).



Temperature Selection: Chilled, 40°C to 95°C & boiling temperature. Use the up and down arrows to press through settings. The chilled icon will light up red when the water is not chilled and light up white when the water is chilled.



Water Volume Selection: 200 to 1000ml. Use the up and down arrows to press through settings.



Filter Icon: Orange light shows when the filter requires changing. See the instructions for replacing the Aqua Optima Evolve+ filter cartridge in section 3. Set up, first use and cleaning.



Refill Icon: Orange light shows when the water tank needs refilling (Non interactive).



Descal Icon: Orange light shows when appliance requires descaling. See the descale procedure in section 5. Descaling.

3. Set up, first use and cleaning



BEFORE USING THE AURORA APPLIANCE FOR THE FIRST TIME

- Remove all packaging. There is clear film covering the display, this can be removed.
- Remove the tank lid and extract the inner water tank and water tank. Wash, rinse and dry thoroughly.
- Prepare filter as per the instructions.

PREPARING THE AQUA OPTIMA EVOLVE+ WATER FILTER CARTRIDGE



Aqua Optima is a unique water filtration system developed to deliver filtered water quickly – reducing chlorine, limescale, organics, herbicides, pesticides, lead and other heavy metals.

1. Remove all packaging from the filter cartridge. There may be a small residue of black carbon particles in the bag or adhering to the cartridge body; this is normal. These particles are harmless and are washed off during the preparation process.
2. Soak the cartridge in a bowl of water for 5-10 minutes to remove all air bubbles (A).
3. Flush for 1 minute under a running tap (B).
4. **The filter cartridge is now ready for use.**

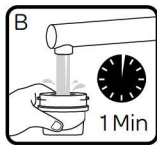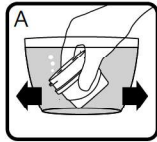

SET UP THE APPLIANCE AS PER THE INSTALLATION INSTRUCTIONS IN SECTION 6. OF THIS MANUAL

1. Using the tank handle lift the water tank from the appliance. Take out the inner water tank.
2. Ensure the seal ring is installed correctly.
3. Fit the Aqua Optima water filter cartridge into the underside of the inner water tank, rotating clockwise to lock into place (A). Ensure it is firmly secure.
4. Reinsert the inner water tank into the water tank.
5. Attach the power cord to the socket at the base of the appliance (B).
6. Fill the water tank through the lid to the "MAX" with cold tap water and refit the water tank. Allow the water to filter through to the main tank. Refill the water tank to "MAX" with cold tap water and refit the water tank into the appliance.
7. Place drip tray and drip tray plate on the front of the appliance (C).
8. Place jug or vessel under the dispense outlet.
9. Plug the power cord into the mains socket and turn on.
10. Using the On/Off button turn the appliance on.
11. Press and hold the lock button for 3 seconds to unlock appliance. Select the chilled temperature and 1000ml dispense volume.
12. Press the dispense button to start dispensing. For the first 800ml no water will be dispensed whilst the internal chilling tank is being filled. Repeat this so that 2L is discarded.
13. **Your appliance is now ready to use.**

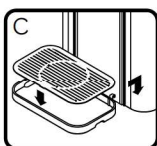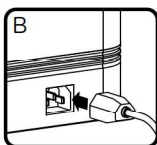

CLEANING

- **ATTENTION: NEVER PLACE THE APPLIANCE BODY, PLUG OR POWER CORD IN WATER OR OTHER LIQUIDS; ALWAYS WIPE CLEAN WITH A DAMP CLOTH.**
- Always switch off and unplug appliance before cleaning.
- Ensure the appliance is cool before cleaning.
- Wash, rinse and dry the inner water tank, water tank and the tank lid regularly, at least when the filter cartridge is replaced.
- Wash the drip tray with soapy water. Rinse all soap away with clean water. Allow to air dry.
- Do not use scouring pads, solvents or abrasives to clean as they may damage the appliance.
- The inner water tank, water tank, tank lid and drip tray are not dishwasher proof.
- For hygiene and safety reasons you should always clean the inner water tank, water tank and tank lid if it has been unused or in storage for longer than 2 weeks.

REPLACING THE AQUA OPTIMA EVOLVE+ FILTER CARTRIDGE

An orange light will show on the control panel when the filter requires changing.

This appliance is only intended for use with Aqua Optima Evolve+ filters.

1. Drain the water from the tanks and remove the tank lid.
2. Take out the inner water tank and remove the filter cartridge by rotating it anti-clockwise.
3. Insert the new filter cartridge as described previously.
4. Reinsert the inner water tank into the water tank. Fill the water tank up to the max line and refit the water tank into the appliance.
5. Dispense water to remove any unfiltered water in the appliance and top up.
6. Press and hold the filter warning symbol for 3 seconds to reset the filter timer.
7. **The appliance is now ready to use.**

To ensure the best performance, the filter cartridge should be changed after 100 litres, which is approximately 30 days of typical use.


CARE & MAINTENANCE

- Water is a foodstuff. We recommend using the filtered water within 3 days. If the appliance is not used for more than 72 hours the water system will need draining. Unplug the appliance and take it to the sink. Unscrew both the drainage caps located on the underside of the appliance and remove the silicon bungs over a sink. Allow all water to drain out of the system. Re-insert the drainage bungs and screw on the caps. Repeat the process in section 3. first use, to refill the appliance to continue use.
- Should the appliance not be used for an extended period of time (for example a holiday) we recommend that the filter is removed and placed in a clean plastic bag and stored in the fridge. This will help to maintain the filter when not in use. Before using the filter after storage, follow the preparation and fitting instructions for use as normal.
- Do not overfill the water tank, do not fill above the "MAX" fill to avoid risk of water overflow in the inner water tank.


4. How to use

1. Fill water tank to the "MAX" mark; water will flow through the filter at a set rate and may take some time due to the action of the filter cartridge.


2. Adjust the height of the drip tray to accommodate the size of the mug used. Ensure the drip tray is fully engaged with the appliance. There are 3 height options (A).

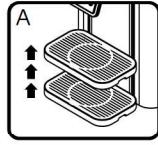


3. Place mug or glass on drip tray (B).

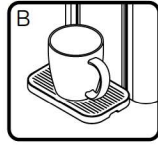


4. Press the On/Off button. The On/Off button will light up blue and the appliance will be locked (C).

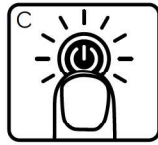


5. Press and hold the lock button for 3 seconds to unlock the appliance. The lock button will change from red to white (D).

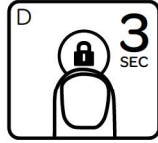

6. Press the up or down button to select the desired temperature and volume settings (E).

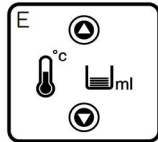

7. Press the dispense button to start dispensing. One beep at the start. (F)

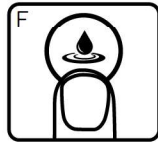

8. The dispense button will fade in and out whilst dispensing and beep twice once complete.

Note:

- To stop the cycle at any time press the dispense button. Once the cycle has stopped it cannot be continued. A new cycle must be started.
- The user interface will automatically lock after 60 seconds if no actions are performed or can be manually locked by holding lock button for 3 seconds.
- Sound - all button sounds can be turned off (not sound in 6. & 7.) in How to use guide, section 4.) by pressing and holding the temperature down arrow and the volume up arrow for 3 seconds in the locked mode.
- Lock – the automatic lock can be turned off by pressing and holding the temperature up arrow and the volume down arrow for 3 seconds in locked mode. Manual locking will still be active.
- The chilled temperature setting ❄️ will light up red when the appliance is chilling the water and will light up white when the water is chilled. At first use the chiller takes around 40 minutes to fully cool down the water (can vary depending on the incoming water temperature).
- The refill icon will turn orange when the water tank needs refilling.
- The filter icon will turn orange when the filter needs replacing, at 100L usage, follow the filter preparation and replacement instructions in this manual.

5. Descaling

For safe & efficient operation of your Aurora appliance it is important to descale regularly.

Untreated scale deposits prevent the element conducting heat efficiently and may affect its performance.

The appliance will display the descale warning symbol when the appliance requires the descale process.

Ensure the water tank is empty and the filter is removed before starting the descale process.

Descal Procedure:

1. Fill water tank with 2L of 4%-5% vinegar solution.
2. Place jug under dispense nozzle.
3. Press and hold the descale warning symbol for 3 seconds.
4. The descale warning symbol will flash and the appliance will run a descale process. **Caution: Dispense solution will be hot; around 60°C.**
5. When the water tank is empty, refill with 2L of cold water and press the descale warning symbol again.
6. The appliance will run a cleaning cycle. **Caution: Dispense solution will be hot; around 60°C.**
7. The descale warning symbol will turn off once complete.
8. Re-insert the Aqua Optima filter after descale process is complete.
9. **The appliance is now ready to use.**


Note:

- To abort the descale process, press the dispense button. Unless the process is run completely the de-scale indicator will not be reset and the appliance will continue displaying descale icon.

6. Installation

The appliance comes with two plug types, one for UK and one for EU, the correct plug should be used and inserted into the plug socket.

WARNING: PLEASE DO NOT DISASSEMBLE THIS APPLIANCE YOURSELF. ELECTRIC ELEMENTS WILL BE EXPOSED AND THERE IS A RISK OF ELECTROCUTION

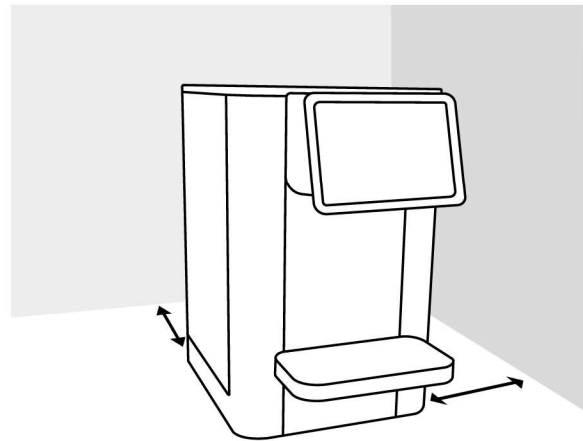

POSITIONING OF APPLIANCE

- Do not install this appliance in a very damp or hot place or near heat source.
- Place the appliance on a flat and even surface.
- Install the appliance in a dry place to avoid damage, moisture or rust.

- Do not use this appliance outdoors. This appliance is only suitable for use indoors.
- Do not overhang the power cord and/or water tray off a table, counter or other surface and avoid contact with hot surfaces.
- **WARNING: DO NOT INSTALL THIS APPLIANCE IN DIRECT SUNLIGHT.**
- Ensure that the ventilation on both sides is never blocked or covered.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

TROUBLESHOOTING

Condition	Possible cause	Solution
Machine will not start.	Appliance is unplugged.	Ensure the power cord is inserted in the appliance and the plug is securely placed into the socket.
Descaling warning symbol on screen.	Appliance needs descaling.	Descal appliance using instructions in manual.
Refill water warning symbol on screen.	Water tank is empty.	Refill water tank following the descaling instructions.
Change filter warning symbol on screen (will illuminate after 100L).	Filter life expired.	Change filter following the Aqua Optima filter instructions. Reset filter warning symbol by holding for 3 seconds.

Code	Operation	Error Description
EAC	Lock + boiling light blink	Wrong input AC power
DSO	Lock + 95°C light blink	Running without water
ENTC	Lock + 90°C light blink	NTC failure
E09	Lock + 80°C light blink	No power to element/heater



This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper disposal or treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product.

Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE.

Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

This appliance conforms to the (LVD) 2014/35/EU, (EMC) 2014/30/EU and (RoHS) 2011/65/EU directives.

The appliance is designed for domestic and small office use only. It should not be used for commercial purposes.

Do not immerse in water.

Warning! Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The product is supplied with a BS 1363 mains plug containing a 13A fuse. If it ever becomes necessary to replace the fuse, only use fuses that are marked BS 1362, and rated at 13A. A second mains cord and CEE 7/7 plug is supplied for use in European markets.

AUR001: Electrical rating input: 220-240V ~ 50- 60Hz 2100W, Class I, climatic class: T